



\*1) If the fuel pump circuit disconnection wire is not present, then please connect to +12V solenoid valves wire and change the signal of activation to +12V in EG DYNAMIC software.  
 \*2) Connect the camshaft position sensor only when necessary  
 \*3) If you want to disable TAP, remove the fuse when the engine is not running.  
 \*4) Optional connection.