


A1	Gas Injector 1	A2		A3		A4	Gas Injector 4
B1	Gas Injector 3	B2	Lambda 1 signal	B3	Lambda 2 signal	B4	Gas Injector 2
C1		C2	Gas absolute pressure	C3	Manifold Absolute Pressure (vacuum)	C4	
D1	Petrol Injector 1B (injector side)	D2	Gas temperature	D3	Reducer temperature	D4	Petrol Injector 6 (petrol ECU side)
E1	Petrol Injector 1B (petrol ECU side)	E2	Diagnostic interface Rx	E3	Diagnostic interface Tx	E4	Petrol Injector 6 (injector side)
F1	Petrol Injector 1A (petrol ECU side)	F2	RPM	F3	Gas level indication sensor	F4	Petrol Injector 7 (petrol ECU side)
G1	Petrol Injector 1A (injector side)	G2	OBDDII CAN L-line	G3	OBDDII CAN H-line	G4	Petrol Injector 7 (injector side)
H1	Petrol Injector 2A (petrol ECU side)	H2	Switch DATA	H3	Switch button	H4	Petrol Injector 8 (petrol ECU side)
J1	Petrol Injector 2A (injector side)	J2	+5V switch power supply	J3	OBDDII K-line	J4	Petrol Injector 8 (injector side)
K1	Petrol Injector 3A (petrol ECU side)	K2	Petrol injector 3 (injector side)	K3	Petrol Injector 4 (petrol ECU side)	K4	Petrol injector 4 (injector side)
L1	+12V ignition from the key	L2	+12V to [interface, mapsensor, level indication sensor]	L3	GND [interface, mapsensor, switch, reducer temp. sensor, level indication sensor]	L4	GND battery
M1	+12V to gas injectors	M2	+12V to solenoid valves	M3	Fuel pump	M4	+12V from battery

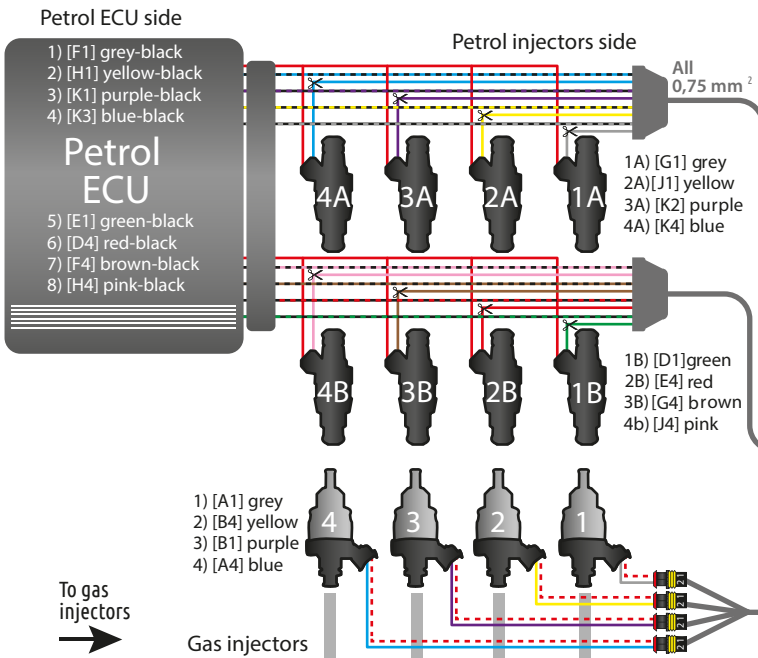

ID 0480306XX

