

# Wiring diagram.

**ATTENTION !!!**  
 1.9; 1.10 controller version requires the fuse in ignition switch circuit.  
 1.11; 1.12 controller version doesn't require the fuse.

**E8** 67R-01 4289.4  
 110R-00 4534

