OSCAR-N MINI

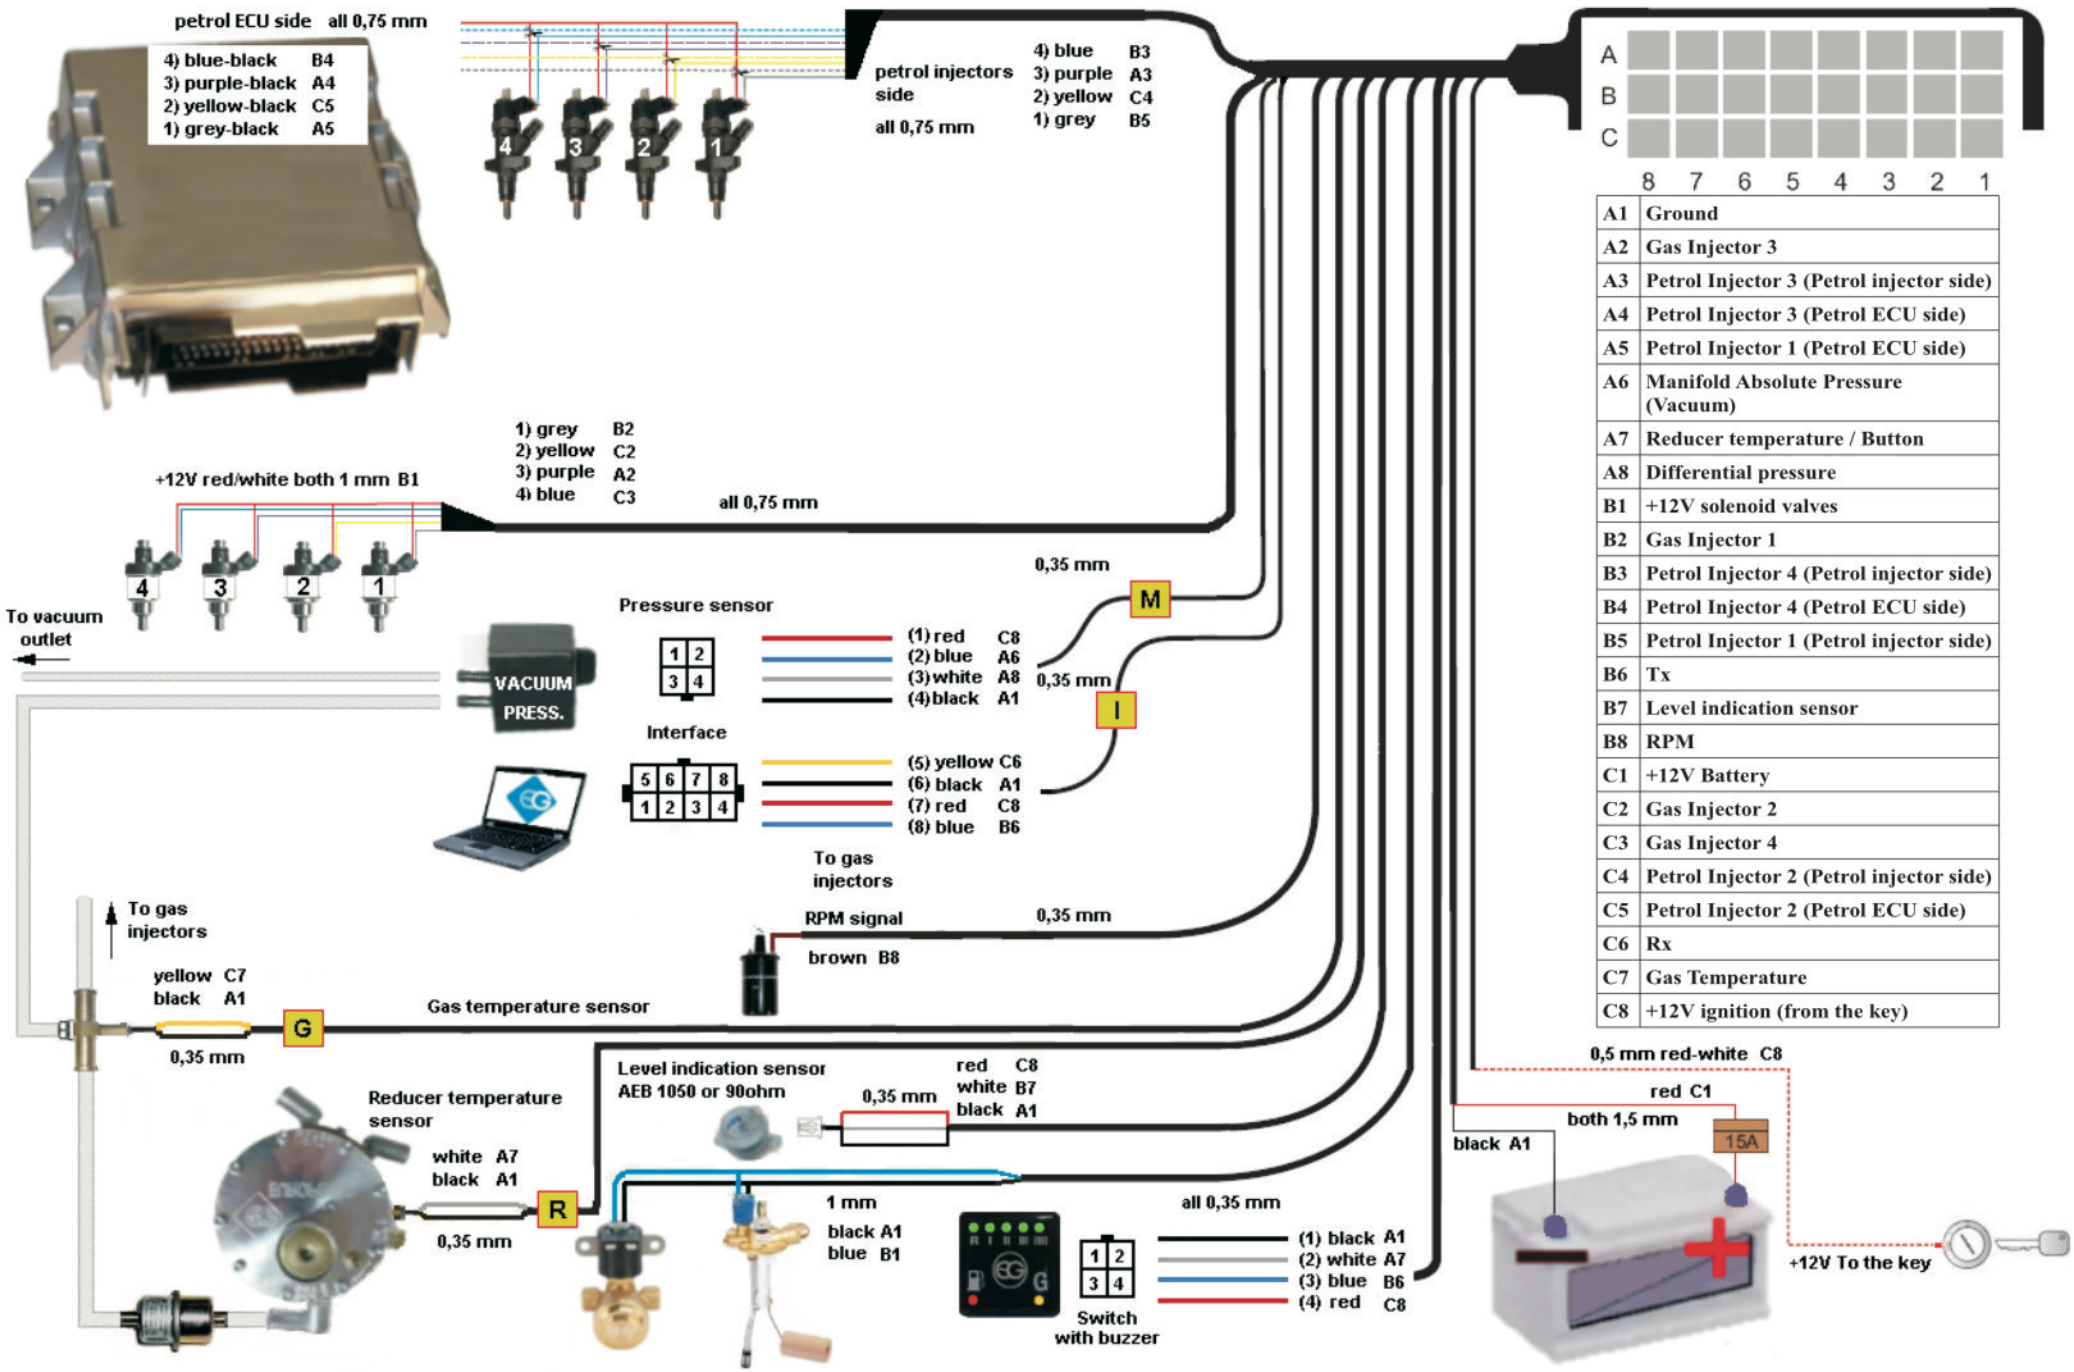

	8	7	6	5	4	3	2	1
A								
B								
C								

A1	Ground
A2	Gas Injector 3
A3	Petrol Injector 3 (Petrol injector side)
A4	Petrol Injector 3 (Petrol ECU side)
A5	Petrol Injector 1 (Petrol ECU side)
A6	Manifold Absolute Pressure (Vacuum)
A7	Reducer temperature / Button
A8	Differential pressure
B1	+12V solenoid valves
B2	Gas Injector 1
B3	Petrol Injector 4 (Petrol injector side)
B4	Petrol Injector 4 (Petrol ECU side)
B5	Petrol Injector 1 (Petrol injector side)
B6	Tx
B7	Level indication sensor
B8	RPM
C1	+12V Battery
C2	Gas Injector 2
C3	Gas Injector 4
C4	Petrol Injector 2 (Petrol injector side)
C5	Petrol Injector 2 (Petrol ECU side)
C6	Rx
C7	Gas Temperature
C8	+12V ignition (from the key)